



WERSI

Brand Owner and Development

MUSIC STORE
professional

User Manual

ENTERTAINER GOLD Package 1

 
Programmed by Kurt Ader

„Wall Of Sounds“

140 new Total Presets



227 new sounds

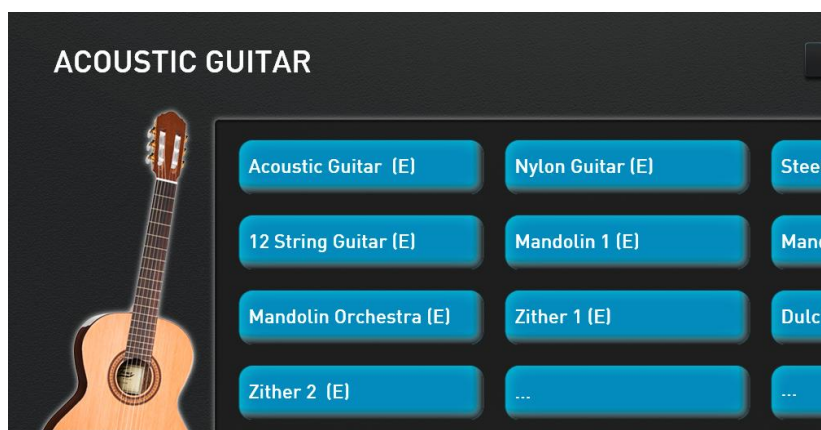

SONIC

OAX1-OAX500-OAX600-OAX700-OAX800

PERGAMON

OAX1000

Imprint

User Manual for

Keyboard **OAX1**
Orgel **OAX500LS**
 OAX600, OAX600LS
 OAX700, OAX700LS
 OAX800LS
 PERGAMON OAX1000

Date: 22. November 2021

Copyright © 2021 by

MUSIC STORE professional GmbH
Istanbulstraße 22-26
51103 Cologne
Germany

E-Mail: info@wersi.net

Website: www.wersi.net

All rights reserved.

We reserve the right to make technical changes to the hardware and software of the OAX instruments without prior notice. We do not guarantee that all the properties described in this manual will be consistent with those of an OAX instrument currently delivered.

Reproduction, translation, microfilming as well as storage and processing in electronic systems is not permitted without our express consent and violates the copyright law.

Instructions

The Entertainer Gold 1 expansion package is available from version V2.86.

With this package you have acquired 227 sounds and 140 total presets, which were programmed by the well-known sound programmer Kurt Ader

Note: Before you can activate the expansion package, you must first install the sounds and total presets with a separate installation program. So before you start, first download the installation files from the WERSI website.


The installation consists of two files with a total size of approx. 4.3 GigaByte. You can use the following links to download the two files to your private computer, or go to the WERSI website in the Service & Downloads area.

[Entertainer1.exe](#)

[Entertainer1.7zip](#)


To install and activate the package, proceed as follows:

1. You have downloaded the above files onto your computer. Now copy this into the main directory (ROOT) on a USB stick or a USB hard drive.
2. Press **SETTINGS** on your OAX instrument
3. Press **Activations Keys**

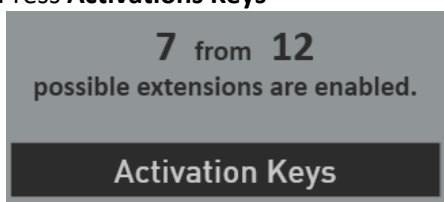

The adjoining display of the maximum extensions may differ.


4. Select **Sounds/Styles**

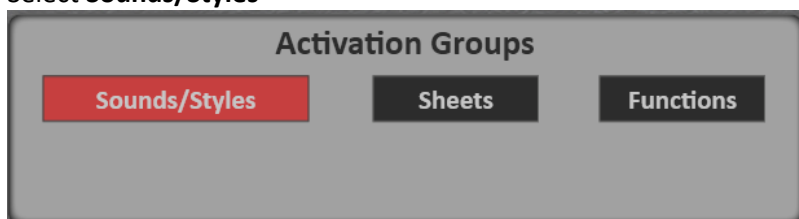


5. Now press **Install** in the Line Entertainer 1



6. A message appears stating that you have to connect the data carrier with the installation files to a USB port. Wait a few seconds until the system has recognized the USB data carrier and confirm with OK. The OAX software is closed and the installation program starts automatically.

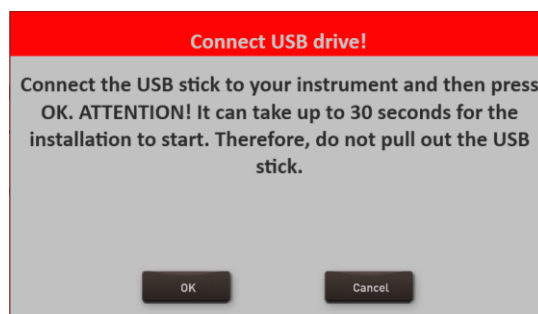


7. First you can set the installation language between German, English and French. Confirm with **WEITER/NEXT>**

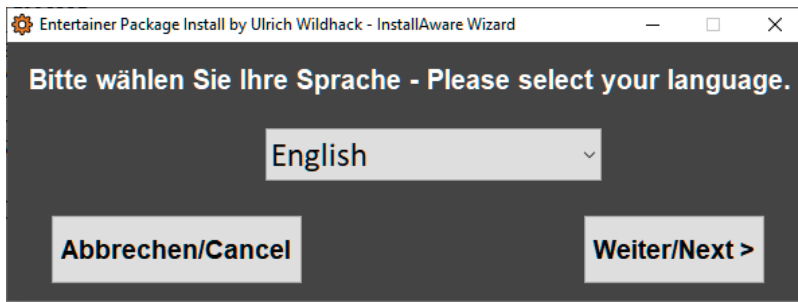

Important NOTE! There are three situations in which the installation does not start.


- There is no WERSI OAX software on your instrument! With **End the Process** the installation will be aborted and you will be back on the Windows desktop.
 - You are still working with an older OAX software and must first update to the current version. With **Next** the OAX software is started again.
 - The **Entertainer1.7zip** file required for installation is not on the USB medium. Please check the files on your USB stick. With **Next** the OAX software is started again.
8. If all requirements are met, you can start the installation with **Next ->**.

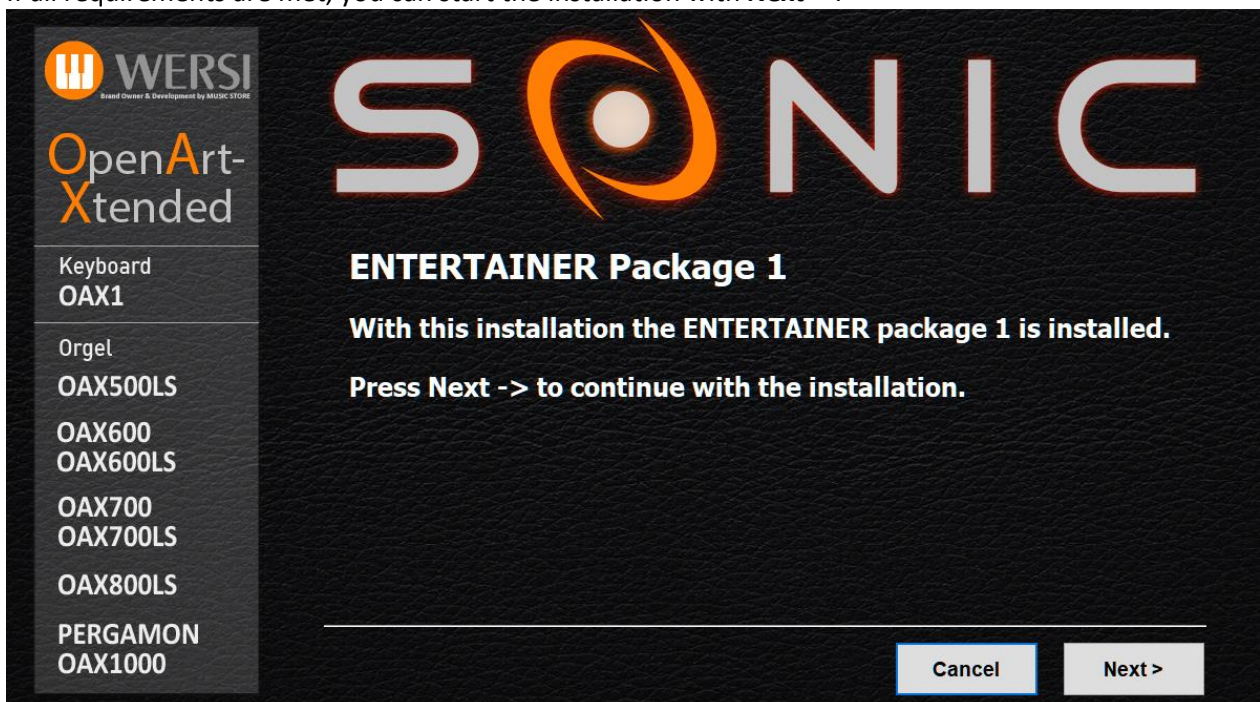

9. The display informs you about the progress of the installation.




 10. After successful installation, click on **Start the OAX software again**.

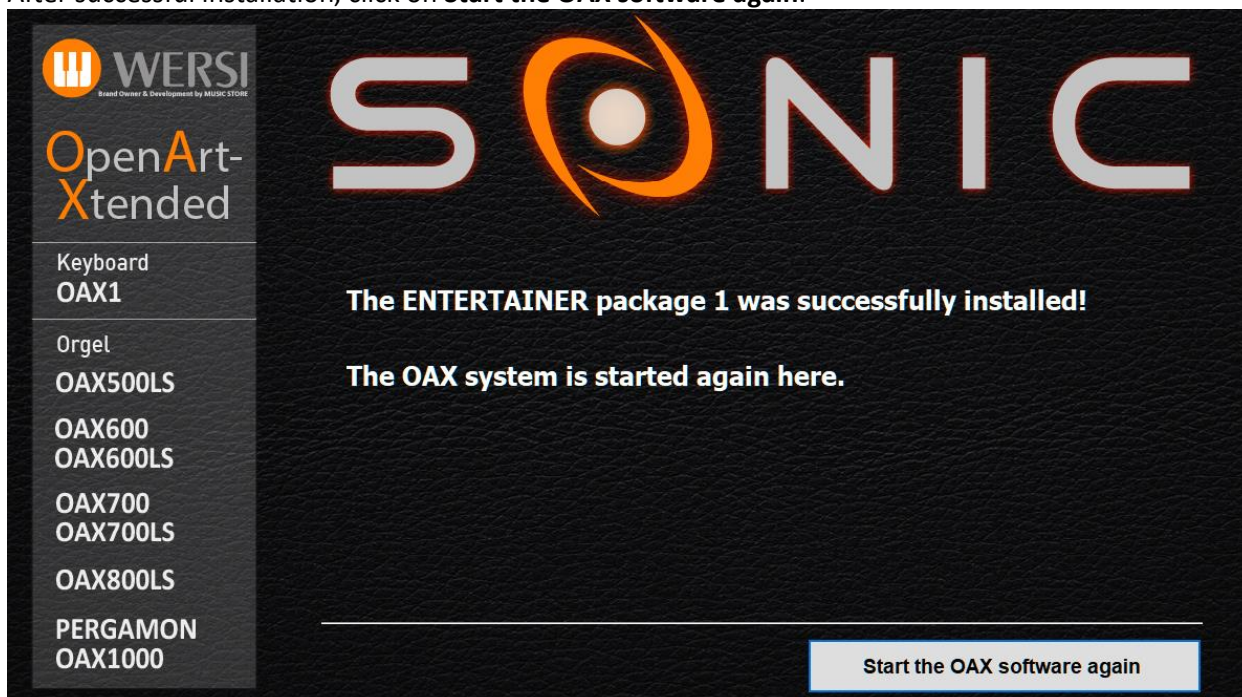

11. Press **SETTINGS** again

12. Press **Activations Keys**

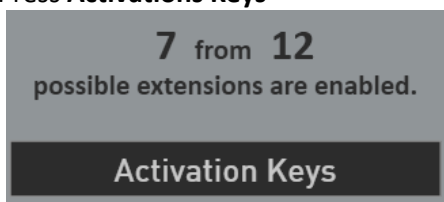

The adjoining display of the maximum extensions may differ.


13. Select **Sounds/Styles**



14. In the line Entertainer 1, the **Install** display has disappeared and the package can now be activated. To do this, press the **Unlock** display button.



15. Enter the activation code and confirm with **ENTER**.

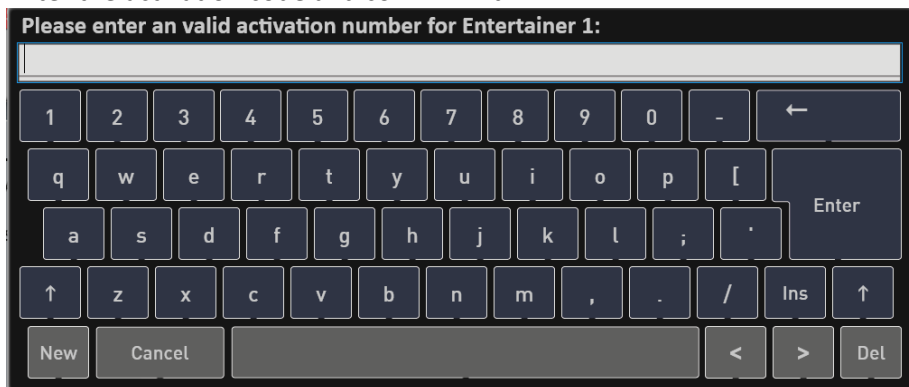


16. The expansion package is now activated.

So that all new data are loaded, switch the instrument off and on again.

Where can you find the new sounds!

There are several ways you can find the new sounds.

 
Via the sound button EXPANSION

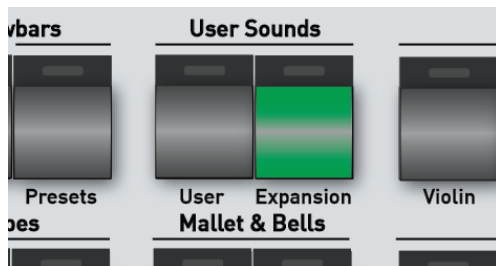


On the right control panel you can see the control panel button **Expansion** in the **User Sounds** area.

As soon as you have selected the button, all sounds are shown in the display.

 The sounds are distributed over 16 levels.

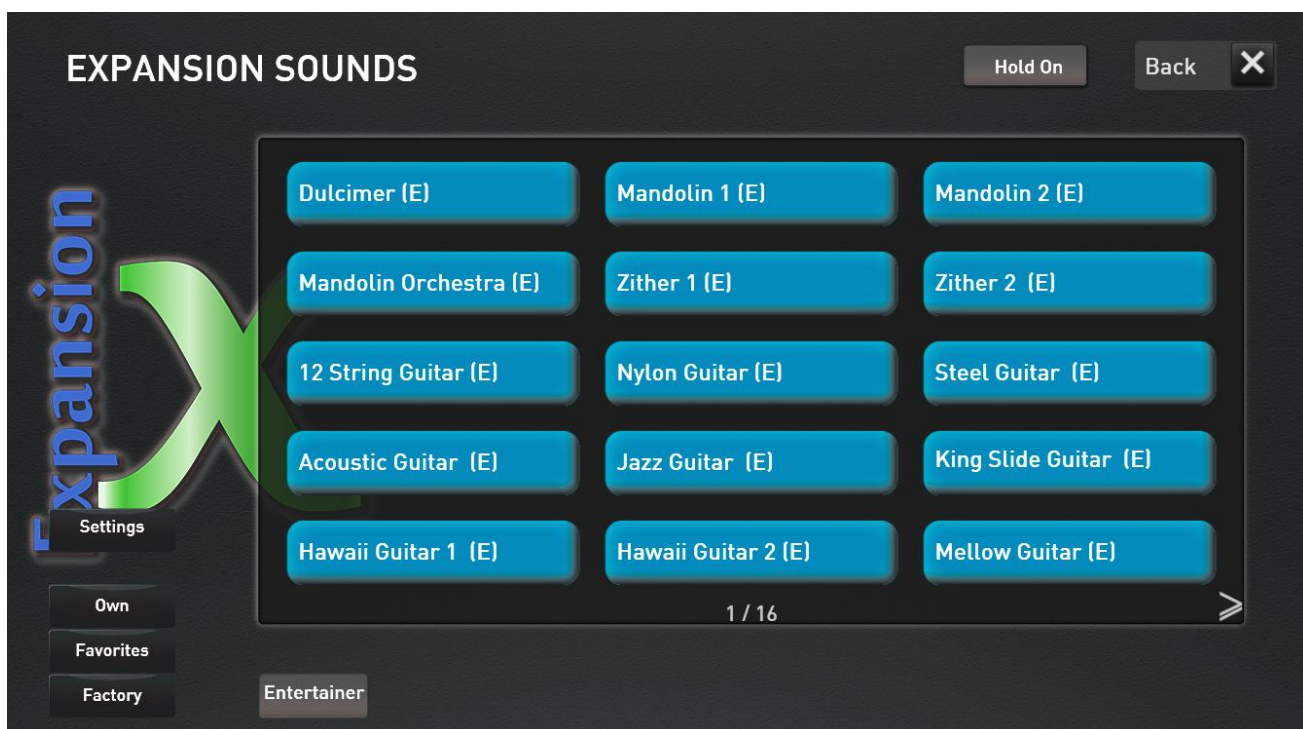

Via individual sound buttons

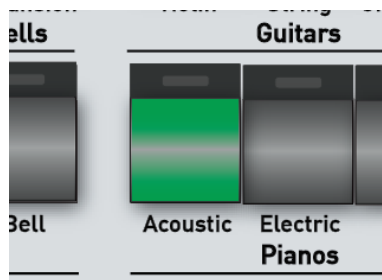


The new sounds have also been assigned to the corresponding sound buttons.

Example: All sounds that belong to the Acoustic Guitars sound group can also be found under the corresponding control panel button.


You can either switch to the respective last level by swiping. For Acoustic Guitars this would be level 6 of 6 (6/6).

Or use the subgroup Exp. (Expansion).

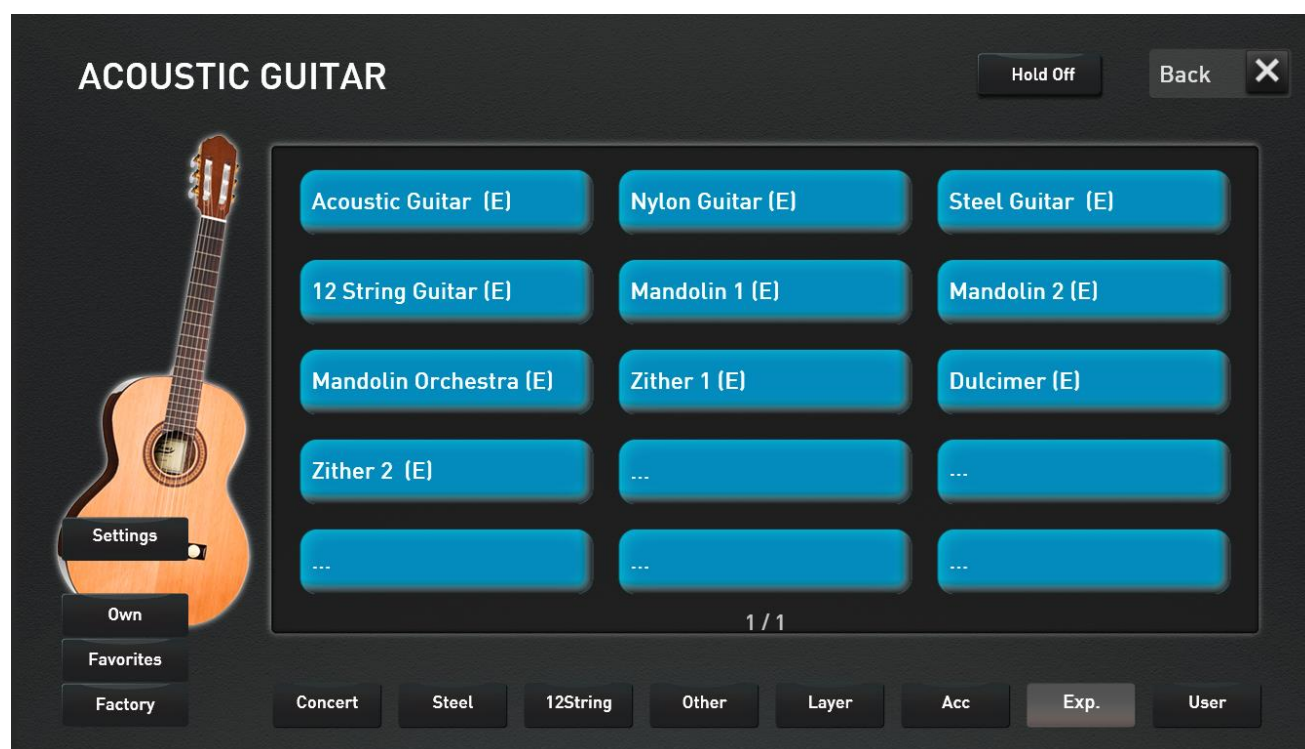

Note: Not every sound button is assigned with new soundss with this expansion package. The Exp. Subgroup remains empty for some buttons.

Via the sound list

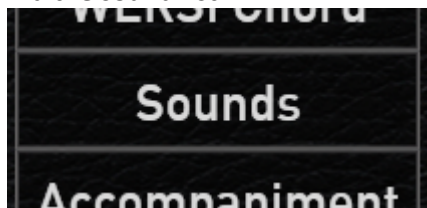

Of course, you can also call up the new sounds via the sound list.

Exactly as with the selection via the control panel buttons, you will find the sounds under the selection **User sounds -> Expansion -> Enter 1**

Soundlist

Main Groups	Instruments	Subgroups	Sound	PRG
All	All	All	Synth Key (E)	035-000-094
Drawbars	User	Enter 1	Plucked Pad (E)	035-000-095
Church Organ	Expansion		Stack Keys (E)	035-000-096
Accordion			Galaxy (E)	035-000-097
User Sounds			Vulcan Harp (E)	035-000-098
Mallet & Bells			Helios Bells (E9)	035-000-099
Vocals			Helios Fast (E)	035-000-100
Strings			Timpani 1 (E)	035-000-101


Or the respective groups of sounds, as shown below.

Soundlist

Main Groups	Instruments	Subgroups	Sound	PRG
All	All	All	Dulcimer (E)	034-000-040
Drawbars	Acoustic	Concert	Mandolin 1 (E)	034-000-041
Church Organ	Electro	Steel	Mandolin 2 (E)	034-000-042
Accordion	Bass	12String	Mandolin Orchestra (E)	034-000-043
User Sounds		Other	Zither 1 (E)	034-000-044
Mallet & Bells		Layer	Zither 2 (E)	034-000-045
Vocals		Acc	12 String Guitar (E)	034-000-046
Strings		Expansion	Nylon Guitar (E)	034-000-047
Guitars		User	Steel Guitar (E)	034-000-048
Pianos			Acoustic Guitar (E)	034-000-049

Where can you find the new Total Presets!

 1. Press **Bank** or **Name** in the TOTAL PRESETS area.

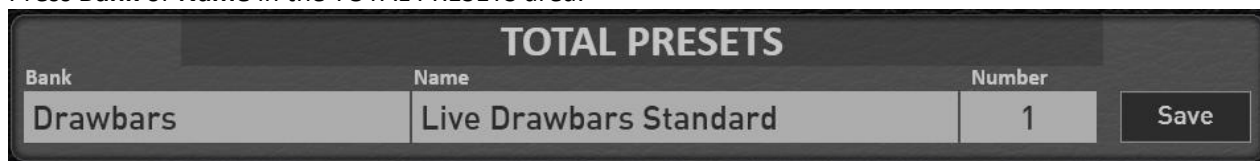

TOTAL PRESETS

Bank	Name	Number	
Drawbars	Live Drawbars Standard	1	Save

2. Press **Factory** and select a bank between “Entertainer Gold 1” and “Entertainer Gold 14” on the left-hand side. To do this, keep pushing the display of the banks upwards.



TOTAL PRESETS

Bank	Name	Number	Hold On	Back	X
Entertainer Gold 6	Accordeon 2	3243			

User Factory

Select the desired Bank:


- Entertainer Gold 5
- Entertainer Gold 6**
- Entertainer Gold 7
- Entertainer Gold 8
- Entertainer Gold 9
- Entertainer Gold 10
- Entertainer Gold 11

Select the desired Total Preset:

- Schifferklavier
- Accordeon 1
- Accordeon 2**
- Accordeon 3
- Accordeon 4
- Alpine Accordeon
- Tango Accordeon 1
- Tango Accordeon 2
- Musette Accordeon 1
- Musette Accordeon 2

39 / 47

3. You will of course also find the total presets in the list display of the total presets.

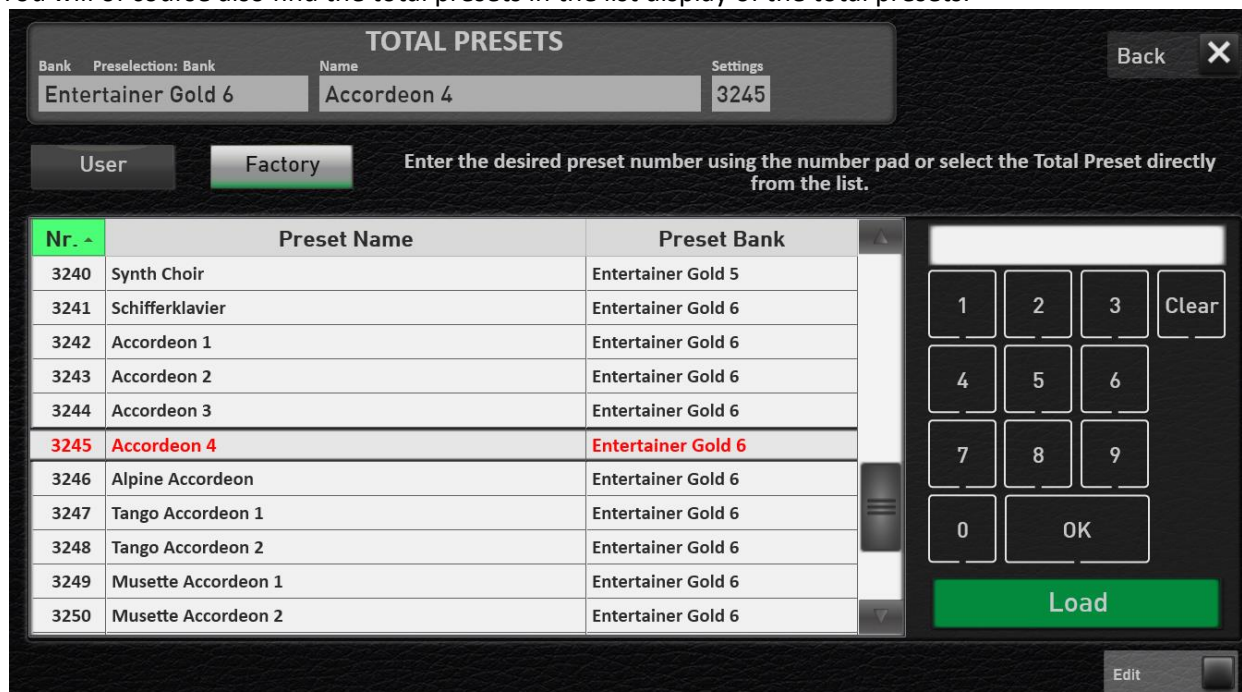

TOTAL PRESETS

Bank	Preselection: Bank	Name	Settings	Back	X
Entertainer Gold 6		Accordeon 4	3245		

User Factory

Enter the desired preset number using the number pad or select the Total Preset directly from the list.

Nr.	Preset Name	Preset Bank
3240	Synth Choir	Entertainer Gold 5
3241	Schifferklavier	Entertainer Gold 6
3242	Accordeon 1	Entertainer Gold 6
3243	Accordeon 2	Entertainer Gold 6
3244	Accordeon 3	Entertainer Gold 6
3245	Accordeon 4	Entertainer Gold 6
3246	Alpine Accordeon	Entertainer Gold 6
3247	Tango Accordeon 1	Entertainer Gold 6
3248	Tango Accordeon 2	Entertainer Gold 6
3249	Musette Accordeon 1	Entertainer Gold 6
3250	Musette Accordeon 2	Entertainer Gold 6

Number Pad:

1	2	3	Clear
4	5	6	
7	8	9	
0	OK		

Load

Edit

List of all new sounds

Drawbar Presets	
Helios Bells (E)	035-000-099
Helios Fast (E)	035-000-100

Accordion Presets	
Schifferklavier (E)	035-000-068
Accordion Alpin (E)	035-000-069
Accordion Castelfidardo (E)	035-000-070
Accordion Musette (E)	035-000-071
Accordion Tango (E)	035-000-072
Steirische Quetsch (E)	035-000-073
Bandoneon (E)	035-000-074
Accordion Mollinari 1 (E)	035-000-075
AccordionMollinari 2 (E)	035-000-076
Accordion Violin (E)	035-000-077

Mallet	
Vibraphone (E)	034-000-113
Glass Marimba (E)	034-000-112
Marimba & Xylophone (E)	035-000-092
Marimba Tremolo (E)	035-000-093
Bell	
FM Bell (E)	034-000-086
Christmas Bell (E)	034-000-115
Celesta (E)	035-000-091

Choir	
Choir 1 (E)	035-000-041
Choir 2 (E)	035-000-042
Choir Mixed Ahhs (E)	035-000-043
Choir Mixed Ohhs (E)	035-000-044
Choir Classic Combination (E)	035-000-109
Choir Classic (E)	035-000-110

Violine	
Violin Solo (E)	035-000-038
Violin Spiccato (E)	035-000-039
Strings	
Strings Solo (E)	035-000-040
Strings Chamber (E)	035-000-037
Strings Pad 1 (E)	034-000-065
Strings Pad 2 (E)	034-000-066
Strings Analogue 1 (E)	034-000-067
Strings Analogue 2 (E)	034-000-068
MKS-STRINGS (E)	034-000-102
Strings Layer (E)	035-000-005
Strings Up & Down Bow (E)	035-000-033
Strings Warm Legato (E)	035-000-035
Strings Warm Spiccato (E)	035-000-036
Strings Analogue Ensemble (E)	035-000-052
Strings Chamber Release (E)	035-000-106
Strings Warm Legato Release (E)	035-000-107
Strings Analogue Ensemble Release (E)	035-000-108
Strings Phat Mix (E)	035-000-112
Orchestra	
Orchestra Mix (E)	035-000-004
Orchestra Timpani & Brass (E)	035-000-111
Orchestra Legato 1 (E)	035-000-002
Orchestra Legato 2 (E)	035-000-003
Orchestra Strings & Choir (E)	035-000-034
Harp (E)	035-000-053
Harp & Pad (E)	035-000-054
Nylon Harp (E)	035-000-055
Harp & Strings (E)	034-000-124
Strings & Woods (E)	035-000-082
Orchestra Tuning (E)	035-000-090

Acoustic Guitar	
Acoustic Guitar (E)	034-000-049
Nylon Guitar (E)	034-000-047
Steel Guitar (E)	034-000-048
12 String Guitar (E)	034-000-046
Dulcimer (E)	034-000-040
Mandolin 1 (E)	034-000-041
Mandolin 2 (E)	034-000-042
Mandolin Orchestra (E)	034-000-043
Zither 1 (E)	034-000-044
Zither 2 (E)	034-000-045
Electro Guitar	
Clean Guitar 1 (E)	035-000-057
Clean Guitar 2 (E)	035-000-058
Chorus Guitar (E)	035-000-059
Blues Guitar (E)	035-000-060
Jazz Guitar (E)	034-000-050
King Slide Guitar (E)	034-000-051
Country Guitar (E)	035-000-056
Mellow Guitar (E)	034-000-054
Stratocaster Nice Old (E)	036-000-007
Stratocaster Amp (E)	036-000-008
Stratocaster Clean (E)	036-000-009
Stratocaster Vibrato (E)	036-000-010
Nice E-Guitar (E)	036-000-006
Hawaii Guitar 1 (E)	034-000-052
Hawaii Guitar 2 (E)	034-000-053
Hawaii Guitar 3 (E)	034-000-057
Synth Guitar 1 (E)	034-000-055
Synth Guitar 2 (E)	034-000-056
Lead Guitar Mix (E)	034-000-060
Guitar Tremolo (E)	034-000-062
Synth Guitar (E)	034-000-063
Guitar Pad Mix (E)	034-000-064
Mute Steel Guitar (E)	035-000-061
Rock Guitar 1 (E)	035-000-078
Rock Guitar 2 (E)	035-000-079
Rock Guitar Hit (E)	035-000-080
Organ Guitar Strings Mix (E)	034-000-061

Bass	
Pick Bass (E)	035-000-062
E Bass 1 (E)	035-000-063
E Bass 2 (E)E	035-000-064
Double Bass (E)	035-000-065
Soft Bass (E)	035-000-066
Fretless Bass (E)	035-000-067

Acoustic Piano	
Piano Warm (E)	035-000-086
Piano Pop (E)	035-000-087
Piano Mix 1 (E)	035-000-050
Piano Mix 2 (E)	035-000-051
Piano & Synth Pad (E)	035-000-088
Piano Cine & Pad (E)	035-000-089
Electro Piano	
E Piano Soft (E)	034-000-109
E Piano Hard (E)	034-000-110
E-Piano Crystal (E)	034-000-111
E Piano Mix (E)	034-000-114
FM Bell Piano (E)	034-000-127

Trumpet - Trombone	
Trumpet Soft (E)	035-000-014
Trumpet Egerland (E)	035-000-015
Trumpet Folkmusic (E)	035-000-016
Trumpet Alpine (E)	035-000-020
Trumpet Vibrato (E)	035-000-012
Fluegelhorn (E)	035-000-028
Trombone 1 (E)	035-000-023
Trombone 2 (E)	035-000-123
Brass Classic 1 (E)	035-000-006
Brass Classic 2 (E)	035-000-007
Trumpet Duo 1 (E)	035-000-010
Trumpet Duo 2 (E)	035-000-011
Trumpet Ensemble (E)	035-000-013

Brass	
Trumpets Layer 1 (E)	035-000-017
Trumpets Layer 2 (E)	035-000-018
Pop Brass Section (E)	035-000-081
Trumpets & Sax (E)	035-000-019
Trumpets Sharp (E)	035-000-021
Warm French Horns (E)	035-000-022
Trombone Bass (E)	035-000-024
Fanfare (E)	035-000-008
Tuba (E)	035-000-025
Saxophon	
Tenor Sax (E)	035-000-027
Tenor Sax Breath (E)	035-000-029
Tenor Sax Vibrato (E)	036-000-002
Bariton Sax (E)	035-000-026
Soprano Sax (E)	036-000-001
Sax Section (E)	035-000-030
Sax Section Soft (E)	035-000-124
Sax Layer 1 (E)	035-000-125
Sax Layer 2 (E)	035-000-126
Sax Breath Soft (E)	035-000-127
Sax Soft (E)	036-000-000
Clarinet & Sax (E)	036-000-003
Flute	
Flute (E)	035-000-084
Pan Flute (E)	035-000-085
Woodwind	
Clarinet 1 (E)	036-000-004
Clarinet 2 (E)	036-000-005
Clarinet 3 (E)	035-000-031
Bassoon (E)	035-000-032
Oboe (E)	035-000-083
Other Woodwind	
Tomitas Whistle (E)	035-000-122

Synthe Lead	
X-705 Guitar (E)	034-000-058
X-705 Cosmic (E)	034-000-059
Synthe Piano Wash (E)	034-000-074
Synthe Lead 1 (E)	034-000-078
Synthe Lead 2 (E)	034-000-079
Angel Synth (E)	034-000-125
Vulcan Harfe (E)	035-000-098
White Eagle (E)	035-000-121
Synthe Pad	
Schlager Mix 1 (E)	034-000-092
Schlager Mix 2 (E)	034-000-093
Schlager Bells 1 (E)	034-000-094
Schlager Bells 2 (E)	034-000-095
Schlager Bells 3 (E)	034-000-096
Schlager Bells 4 (E)	034-000-097
Schlager Bells 5 (E)	034-000-098
Schlager Bells 6 (E)	034-000-099
Phantasy (E)	034-000-075
Crystalbell (E)	034-000-076
LA Synthbell (E)	034-000-077
Stringbell (E)	034-000-080
Beachwave (E)	034-000-082
Heaven 1 (E)	034-000-083
Heaven 2 (E)	034-000-084
Wavemix (E)	034-000-085
Digital Native (E)	034-000-087
Nylon Atmo (E)	034-000-088
Heaven Staccati (E)	034-000-089
Future Pad (E)	034-000-090
Pizzagogo (E)	034-000-091
W-State Pad 1 (E)	034-000-100
W-State Pad 2 (E)	034-000-101
CM-I Voice (E)	034-000-108
Heaven Pad (E)	034-000-116
Bell Stack (E)	034-000-117
Heaven Bell (E)	034-000-118

Synthe Pad	
Brightness (E)	034-000-119
Sphaera (E)	034-000-126
Dark Angel Pad (E)	035-000-000
Dream Heaven (E)	035-000-001
Synthe Haa Pad (E)	035-000-045
Itopia (E)	035-000-046
Hollow Release (E)	035-000-047
Synthe Echo Pan 1 (E)	035-000-048
Synthe Echo Pan 2 (E)	035-000-049
Synthkey (E)	035-000-094
Plucked Pad (E)	035-000-095
Galaxy 2.0 (E)	035-000-097
Phat VCF Swell Pad (E)	035-000-115
Run Blade Runnn (E)	035-000-116
Release Pad (E)	035-000-117
Big Pad (E)	035-000-118
Dreaming (E)	035-000-119
Synthe Analog	
Synthe Brass 1 (E)	034-000-069
Synthe Brass 2 (E)	035-000-009
Analog Bläser (E)	034-000-070
X-Brass (E)	034-000-071
Apres SAW (E)	034-000-072
Analogue Swell (E)	034-000-073
Synthe Wash €	034-000-081
Camouflage (E)	034-000-103
In The Air 1 (E)	034-000-104
In The Air 2 (E)	034-000-105
Bright Pad (E)	034-000-106
Warm Pad (E)	034-000-107
Analogue Brass (E)	034-000-120
Analogon (E)	034-000-121
High Pad (E)	034-000-122
Analogue Pad (E)	034-000-123
Stack Keys (E)	035-000-096
Warm MG Pad (E)	035-000-113
Warm Synth Brass (E)	035-000-114
Flute Synth Pad (E)	035-000-120

Drums	
Piatti (E)	035-000-105
Percussion	
Timpani 1 (E)	035-000-101
Timpani 2 (E)	035-000-102
Timpani Roll (E)	035-000-103
Cinematic Hits (E)	035-000-104

List of the new total presets

No.	Bank	Total Preset Name
3191	Entertainer Gold 1	Alpine Bells 1
3192		Alpine Bells 2
3193		Alpine Bells 3
3194		Alpine Bells 4
3195		Alpine Bells 5
3196		Alpine Bells 6
3197		Alpine Bells 7
3198		Alpine Bells 8
3199		Alpine Bells 9
3200		Alpine Bells 10
3201	Entertainer Gold 2	Alpine Bells 11
3202		Alpine Bells 12
3203		Alpine Bells 13
3204		Alpine Bells 14
3205		Alpine Bells 15
3206		Alpine Bells 16
3207		Alpine Bells 17
3208		Alpine Bells 18
3209		Alpine Bells 19
3210		Alpine Bells 20
3211	Entertainer Gold 3	Alpine Bells 21
3212		Alpine Bells 22
3213		Alpine Bells 23
3214		Alpine Bells 24
3215		Alpine Bells 25
3216		Alpine Bells 26
3217		Alpine Bells 27
3218		Alpine Bells 28
3219		Alpine Bells 29
3220		Alpine Bells 30

No.	Bank	Total Preset Name
3221	Entertainer Gold 4	VCF Synth Pad
3222		X-705 Synth
3223		Nemo Synth
3224		Synth Guitar 1
3225		Synth Guitar 2
3226		Plucked Pad
3227		Echo Synth 1
3228		Echo Synth 2
3229		Layer Synth
3230		Synth Brass
3231	Entertainer Gold 5	Midi Mix 1
3232		Midi Mix 2
3233		Future Synth
3234		Warm Pad
3235		Angel Pad
3236		Phantasy Pad
3237		Digital Pad
3238		Heaven Pad
3239		Itopia Pad
3240		Synth Choir
3241	Entertainer Gold 6	Schifferklavier
3242		Accordeon 1
3243		Accordeon 2
3244		Accordeon 3
3245		Accordeon 4
3246		Alpine Accordeon
3247		Tango Accordeon 1
3248		Tango Accordeon 2
3249		Musette Accordeon 1
3250		Musette Accordeon 2

No.	Bank	Total Preset Name
3251	Entertainer Gold 7	Chamber Strings
3252		Octave Strings
3253		Traumschiff Strings
3254		Mantovani Strings
3255		Full Strings 1
3256		Full Strings 2
3257		Full Orchestra 1
3258		Full Orchestra 2
3259		Full Orchestra 3
3260		Full Orchestra 4
3261	Entertainer Gold 8	Full Orchestra 5
3262		Full Orchestra 6
3263		Piano & Tuning Orchestra
3264		Piano & String Orchestra
3265		Trumpets & Orchestra 1
3266		Trumpets & Orchestra 2
3267		Dream Orchestra
3268		Plucked Orchestra
3269		Mandolin Orchestra 1
3270		Mandolin Orchestra 2
3271	Entertainer Gold 9	Last Trumpets 1
3272		Last Trumpets 2
3273		Last Big Brass
3274		Big Band Brass 1
3275		Big Band Brass 2
3276		Ballermann Brass
3277		Pop Brass
3278		Sax Ensemble
3279		Mix Choir 1
3280		Mix Choir 2

No.	Bank	Total Preset Name
3281	Entertainer Gold 10	Zither 1
3282		Zither 2
3283		Hackbrett
3284		Steel Guitar
3285		12 String Guitar
3286		E-Guitar
3287		Guitar Dream 1
3288		Guitar Dream 2
3289		Mandoline 1
3290		Mandoline 2
3291	Entertainer Gold 11	Alpine Dreams 1
3292		Alpine Dreams 2
3293		Alpine Dreams 3
3294		Alpine Dreams 4
3295		Alpine Dreams 5
3296		Alpine Stubn Musi 1
3297		Piano Pop Mix
3298		Synthesizer Mix
3299		Morgens um Sieben :-)
3300		Schlager Mix
3301	Entertainer Gold 12	Zirkus Marimba
3302		Marimba Tremolo
3303		Sarah Choir
3304		Stack Synth Mix 1
3305		Stack Synth Mix 2
3306		A Tribute To Ennio
3307		Oboe Bassoon & Strings
3308		Clarinet & Strings
3309		Volga Trumpet Ensemble
3310		Solo Trumpet Vibrato

No.	Bank	Total Preset Name
3311	Entertainer Gold 13	Whistle Synth
3312		Eagle Synth
3313		Panflute & Synth
3314		Alpine Synth 1
3315		Alpine Synth 2
3316		Warm Synth Brass 1
3317		Warm Synth Brass 2
3318		Strat & Synth Guitar
3319		Stratocaster & Pad
3320		Strato Guitar 1
3321	Entertainer Gold 14	Strato Guitar 2
3322		Strato Guitar 3
3323		Strato Guitar 4
3324		Stratocaster & Phantasy
3325		Sax Quartet 1
3326		Sax Quartet 2
3327		Sax Quartet 3
3328		Sax Quartet 4
3329		Saxes & Trumpet
3330		Clarinet Ensemble



distributed by

MUSIC STORE
professional

MUSIC STORE professional GmbH
Istanbulstraße 22-26
51103 Köln

E-Mail: info@wersi.net

Website: www.wersi.de