



WERSI

Markeninhaber und Entwicklung

MUSIC STORE
professional

User Guide

Style Convert

DiscoBeat Club Dance **Rumba**
Midnight Swing Samba
Schlager Party Alpen Schlager
Oberkrainer Polka **ChaCha** **Big Band**
6-8SlowRock **Country Beat** Synthe Rock

OAX
OpenArt-Xtended

SONIC

OAX1-OAX500-OAX600-OAX700-OAX800

PERGAMON

OAX1000

Valid from OAX Software Version V2.50

Imprint

User guide

for

WERSI-Organ SONIC OAX1-OAX500-OAX600-OAX700-OAX800- PERGAMAON OAX1000

1. Edition

Stand: 18. January 2021

Copyright © 2019 by

MUSIC STORE professional GmbH

Istanbulstraße 22-26

51103 Köln

Germany

E-Mail: info@wersi.net

Website: www.wersi.de

All rights reserved.

We reserve the right to make technical changes to the hardware and software of the OAX instruments without prior notice. We do not guarantee that all the properties described in this manual will be consistent with those of an OAX instrument currently delivered.

Reproduction, translation, microfilming as well as storage and processing in electronic systems is not permitted without our express consent and violates the copyright law.

Description

With these expansion packages, you have the option of converting styles from other manufacturers into the WERSI OAX format. Thus, you have a variety of styles available.

The two expansion packages for YAMAHA and ROLAND are currently available. You can use these extensions with the help of chargeable activation numbers on your WERSI OAX instrument.

Compatibility YAMAHA -> Tyros 3, 4, 5 and Genos KEY0005077-000 € 149, -

Compatibility ROLAND -> all formats KEY0005077-001 € 99, -

Important NOTE:

No styles from the specified manufacturers are supplied with these expansion packages.

General information on style conversion

During a conversion, the tracks of the automatic accompaniment and the drum notes are transferred to the OAX format. The sounds of the individual tracks cannot be transmitted directly.

Yamaha sometimes used so-called audio styles for the Tyros 5. These types of styles are no longer used with the GENOS. These styles cannot be converted.

The conversion module therefore searches for suitable sounds from the OAX system and saves them for the converted style.

Each manufacturer also uses different approaches to process the fingered chords. A converted style is never an exact copy of the original.

If you want to improve the converted style, you can adjust the volume and sounds of the individual tracks in the Style Editor and then save the style again.

Adjust the volume (velocity) of the individual drum sounds. So you can make a snare a little quieter and the kick drum a little louder. Or swap the used snare for a different snare. Information on this can be found in the OAX programming instructions.


Unlock the expansion package

Before you can convert styles from other manufacturers, the corresponding package must first be activated. You have received an activation number that is only suitable for the package you have purchased and only for your instrument.


If you do not have an activation number yet, you will find further information on activation in the OAX operating manual in chapter 11.

To activate the package, proceed as follows:

1. Press **SETTINGS** and then **ACTIVATION KEYS**.

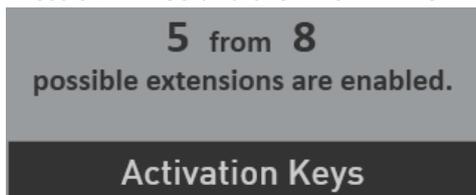

2. Select the activation group **Functions**

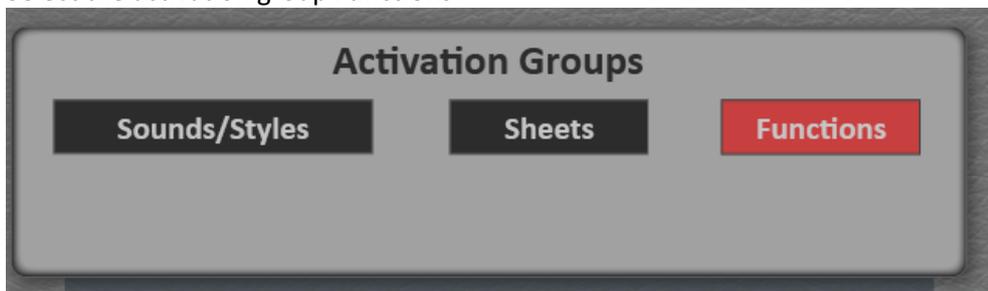


3. Now press in the relevant line whether you have received an activation number for the final activation (Unlock) or a trial activation (Taste).

Description	Information	Activation Number		
Yamaha Style Convert	Converting Tool for Yamaha-Styles	Not activated	Unlock	Taste
Roland Style Convert	Converting Tool for Roland-Styles	Not activated	Unlock	Taste


4. Enter the code that you received for the package.
5. Confirm with **ENTER**.
6. Now switch the instrument off and on again.

How can you convert a style?


- To convert a style, press ACCOMPANIMENT on the main display. The CONVERT display button is located under the list of available styles.

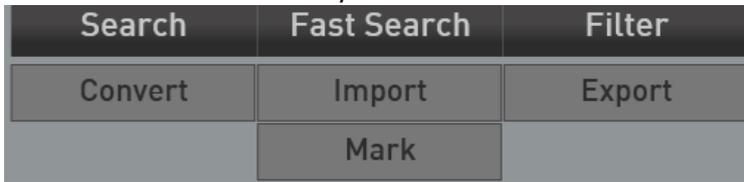

- Press **Convert**.
- Now select the desired type and then whether you want to import the style from a USB stick or from the respective directories My Wersi \ StylesYamaha or My Wersi \ StylesRoland from your internal hard drive.

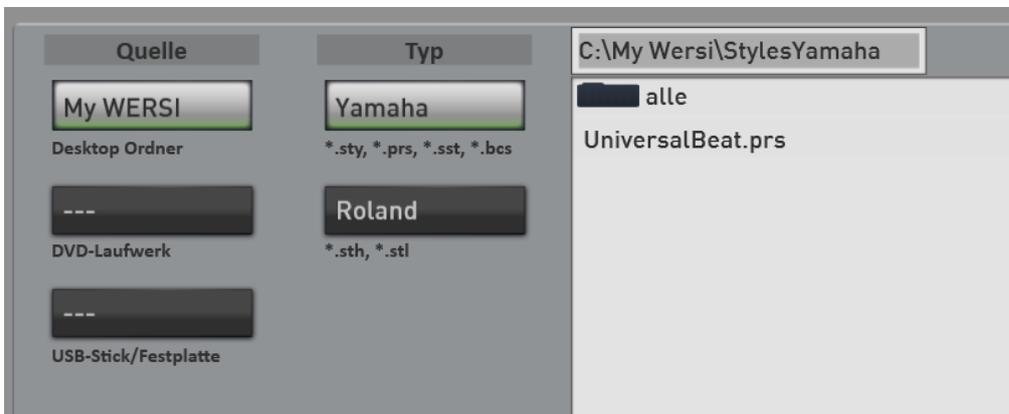

- Select the style you want in the list
- Then confirm with **IMPORT**.
- After the conversion, select a storage location in your Accompaniment list and press **SAVE**.

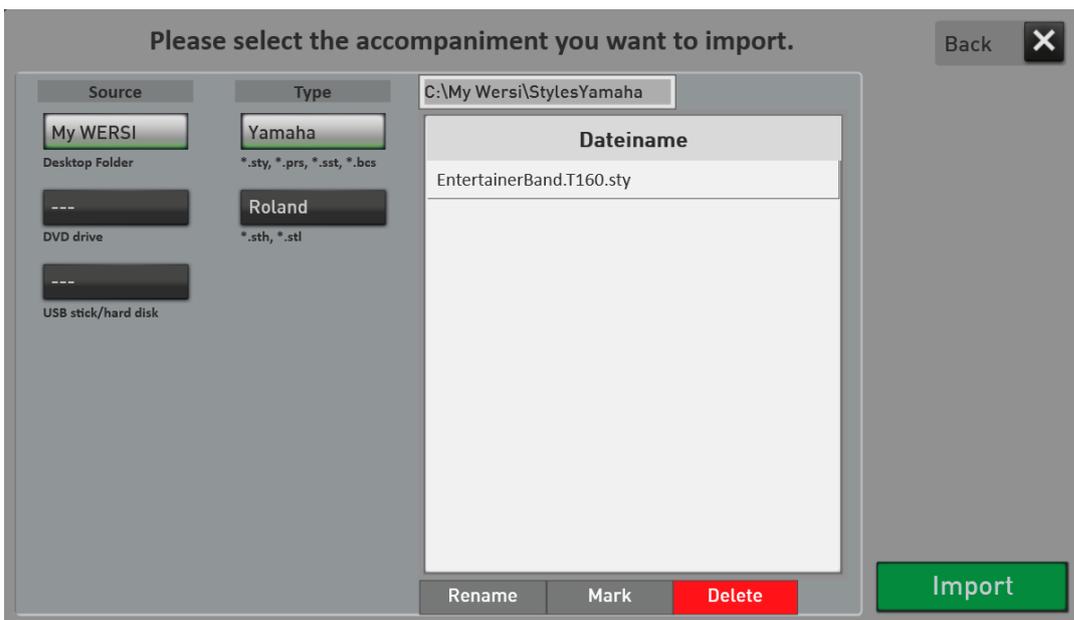



Brand Owner and Development

MUSIC STORE
professional

MUSIC STORE professional GmbH
Istanbulstraße 22-26
51103 Köln

E-Mail: info@wersi.net

Website: www.wersi.de